

Le Vibromasseur wand est un objet puissant et versatile conçu pour la stimulation externe qui peut contribuer à réduire les tensions et le stress. Il peut être utilisé sur le clitoris et les zones érogènes ainsi que n'importe où sur le corps. Placez le sur les zones que vous désirez stimuler et ajustez le niveau d'intensité à votre plaisance.

Fonctionnement

1. Avant la première utilisation, assurez-vous que la batterie est pleinement chargée.
2. Appliquez un lubrifiant à base d'eau sur les zones que vous souhaitez stimuler au besoin.
3. Activez la vibration en appuyant sur le bouton au bas du manche pendant 3 secondes.
4. Naviguez les 10 différents modes de vibration en appuyant sur le même bouton.
5. Déplacez le vibromasseur sur les zones érogènes qui vous procurent du plaisir.

6. Éteignez-le en maintenant le bouton pendant 3 secondes où jusqu'à ce qu'il s'éteigne.

Entretien

Nettoyez le Vibromasseur wand avec le nettoyeur Steri-clean avant et après chaque utilisation.

Conservez-le dans un endroit frais et sec à l'abri des rayons de soleil, de la chaleur et de la poussière.

Avertissement

Pour utilisation externe seulement. Ne partagez pas votre Vibromasseur wand avec d'autres personnes, car cela peut augmenter le risque de contracter des infections sexuellement transmissibles ou autres maladies.


Garantie

Pour toute information concernant la garantie de votre produit, veuillez consulter notre site internet: floravi.com

N'hésitez pas à nous écrire pour nous faire part de vos commentaires: info@floravi.com

Floravi

WAND MASSAGER
VIBROMASSEUR WAND

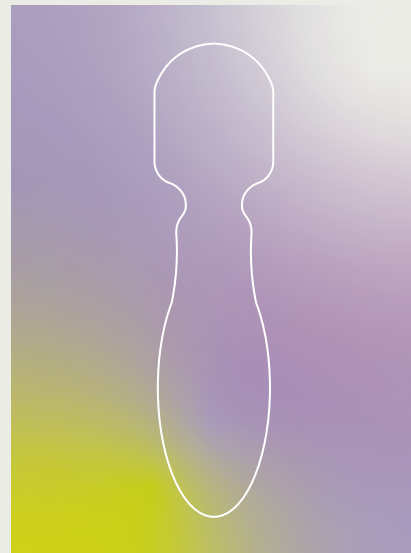

User guide Guide d'utilisation
Wand Massager vibromasseur wand

The Wand massager is a powerful and versatile device designed for external stimulation that can help reduce tension and stress. It can be used on the clitoris and erogenous zones as well as anywhere on the body. Place it on the areas you wish to stimulate and adjust the intensity level to your liking.

How to use

1. Make sure it is fully charged before use.
2. Apply a water-based lubricant to the area you wish to stimulate if needed.
3. Turn on the device by pressing the button at the bottom during 3 seconds.
4. Navigate the 10 various vibration modes by pressing the button again.
5. Move the Wand over your erogenous zones, focusing on areas that feel good to you.
6. Turn off the massager by pressing and holding the button for 3 seconds or until the massager stops.

Maintenance

Clean the massager before and after every use with Steri-clean.

Store the massager in a cool, dry place away from direct sunlight, heat and dust.

Warning

For external use only. Do not share your massager with others as this can increase the risk of transmitting sexually transmitted infections or other diseases.


Warranty

For all information regarding the warranty of your product, please refer to our website: floravi.com

Feel free to write us and let us know your comments: info@floravi.com

Charging Instructions

Instructions de recharge



DAPHNE

Wand Massager

8 vibration modes

2 intensity levels

Easy to use

Splash resistant

Rechargeable

Travel size

Discreet and versatile

Vibromasseur wand

8 modes de vibration

2 niveaux d'intensité

Facile à utiliser

Résistant aux éclaboussures

Rechargeable

Format de voyage

Discret et versatile